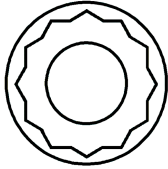


Anziehvorschrift für Zylinderkopf		001.840 passend für / suitable for adaptable à / adaptable a Mazda	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			

Schraubenkopf / Head shape
 Tête de vis / Cabeza de tornillo
 

707.630
M 11 x 107

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

8	4	1	5	9
7	3	2	6	10

Anziehen/ * 20-30 Nm
 Tightening/ 40-60 Nm
 Serrage/ 76-81 Nm
 Apriete

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor
 ✚ 1,27 mm, Ø 72,5 mm
 Mot.: B3(16V) 1,3 ltr., 39-54 kW (53-73 PS)
 121 II, 323 IV-V

ElringKlinger AG, Max-Eyth-Str.2
 72581 Dettingen / Erms. Tel. 07123/724 601

001.840