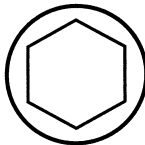
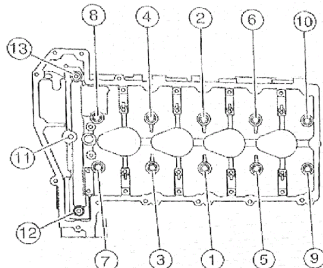


Anziehvorschrift für Zylinderkopf		002.131		
Tightening Instructions for Cylinder Head		passend für / suitable for		
Instructions de serrage pour culasse		adaptable à / adaptable a		
Prescripciones de apriete para culatas		GM		Das Original
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
Anziehen/ Tightening/ Serrage/ Apriete		M6 * Pos. 12-13: 7 Nm ➤ Pos. 12-13: 60° * Pos. 11: 7 Nm ➤ Pos. 11: 120°		
* ➤		M11 Pos. 1-10: 30 Nm Pos. 1-10: 155°		
Zeichenerklärung / Explanations / Explication / Explicacion				
* ★ □ ● ➤		neue Zylinderkopf-schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel		
		use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle		
		utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage		
		emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro		
Motortyp / Engine type / Type de moteur / Tipo de motor				
✚ 0,65 mm, Ø 94,2 mm				
Mot.: LK5 2,8 ltr.				
Canyon, Colorado				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*002.131*		