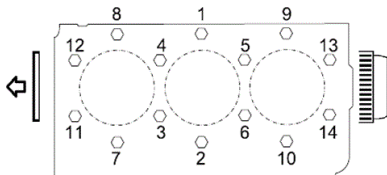


Anziehvorschrift für Zylinderkopf		003.270				
Tightening Instructions for Cylinder Head						
Instructions de serrage pour culasse						
Prescripciones de apriete para culatas						
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		passend für / suitable for adaptable à / adaptable a Daedong				
		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete 				
Anziehen/ Tightening/ Serrage/ Apriete * ★ ● 103.0~107.9 Nm warm up 30 minutes 103.0~107.9 Nm						
Zeichenerklärung / Explanations / Explication / Explicacion						
*	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos		
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)		
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo		
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera		
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro		
Motortyp / Engine type / Type de moteur / Tipo de motor						
Mot.: 3A165						
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*003.270*			