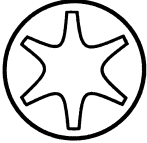
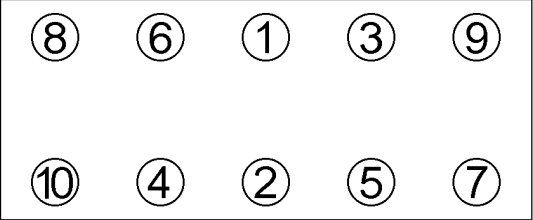


Anziehvorschrift für Zylinderkopf		025.030		
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
passend für / suitable for adaptable à / adaptable a		Ford/Mazda	Das Original	
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo				
		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
087.830 M 10x1,5x143				
Anziehen/ * 15 Nm Tightening/ 30 Nm Serrage/ ➤ 90° Apriete				
Zeichenerklärung / Explanations / Explication / Explicacion				
*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
✚ 0,5 mm, Ø 73 mm				
Mot.: DHA, DHB, DHC, DHD, DHE, DHF, DHG FUJA, FUJB 1,25 ltr. Zetec 55 KW (75 PS)				
Fiesta, Mazda 121				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*025.030*		