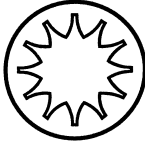
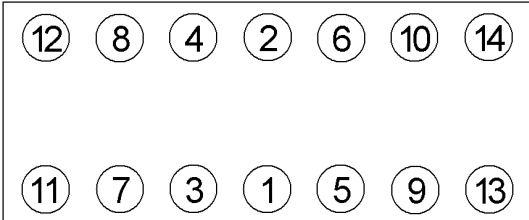


Anziehvorschrift für Zylinderkopf		044.581 passend für / suitable for adaptable à / adaptable a	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
 759.640 M 12x1,75x160				
Anziehen/ Tightening/ Serrage/ Apriete		* 56 Nm ➤ 90° ➤ 90°		
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
✱ 1,74 mm, Ø 90,9 mm				
Mot.: M104 E28/E32 142-170 KW (193-231 PS)				
W202 C280 / W140 S280/300SE W124 E280/E320 / R129 SL280/SL320 W210 E280/E320 / W463 G320 SsangYong Korando, Musso, Rexton				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*044.581*	