

Anziehvorschrift für Zylinderkopf		049.418		 Das Original
Tightening Instructions for Cylinder Head		passend für / suitable for		
Instructions de serrage pour culasse		adaptable à / adaptable a		
Prescripciones de apriete para culatas		Fiat		
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
⑧⑥②⑤⑩ ⑦③①④⑨				
Anziehen/ Tightening/ Serrage/ Apriete	128.AR.000 128.AS.000 * 95 Nm	128.A1.000/138... M 10 * 35 Nm ➤ 90° ➤ 90° 1000 km ➤ 60°-90°	M 12 * 35 Nm 70 Nm 93 Nm 1000 km ☐ 93 Nm	
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
✱ 1,4 mm, Ø 87 mm				
Mot.: 128 A1.000, 128 AR.000, 128 AS.000 138 A1.000, 138 A2.000, 138 A4.000				
128, Ritmo				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*049.418*	