

Anziehvorschrift für Zylinderkopf		051.340 passend für / suitable for adaptable à / adaptable a Honda	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo				
 706.120 M 10 x 140		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete 104268 75139		
Anziehen/ * 30 Nm Tightening/ 68 Nm Serrage/ Apriete				
Zeichenerklärung / Explanations / Explication / Explicacion				
* 	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★ 	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□ 	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
● 	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤ 	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor ⚙ 1,26 mm, Ø 76,0 mm Mot. :D13B2 1,3 ltr. 16V, 55 kW (75 PS) Civic				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*051.340*		