

Anziehvorschrift für Zylinderkopf		058.740 passend für / suitable for adaptable à / adaptable a Honda	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
A 	B 	862410 93157		
706.150 M 12 x 163/199				
Anziehen/ Tightening/ Serrage/ Apriete	A Accord CE,CD ->1998 Shuttle RA1 ->1998 * 39 Nm 69 Nm 98 Nm	B Accord CG 1998-> * 29 Nm ➤ 90° ➤ 90° ➤ 90°		
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
✱ 0,76 mm, Ø 86 mm				
Mot.: F20B2/3/5/7, F22B1/2/3/4/5/6/8/9, F22Z2/6 2,0 ltr.-2,2 ltr., 100-110 kW (136-150 PS)				
Accord, Civic, Odyssey, Prelude, Shuttle Acura CL				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*058.740*		