

Anziehvorschrift für Zylinderkopf			058.981		 Das Original
Tightening Instructions for Cylinder Head			passend für / suitable for		
Instructions de serrage pour culasse			adaptable à / adaptable a		
Prescripciones de apriete para culatas			PSA		
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo			Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
A  B 			⑧ ④ ① ⑤ ⑨ ⑦ ③ ② ⑥ ⑩		
152.550 M 12x1,5x123					
Anziehen/ Tightening/ Serrage/ Apriete			A * 30 Nm 70 Nm ➤ 120° B * 20 Nm 60 Nm ➤ 90° ➤ 90°		
Zeichenerklärung / Explanations / Explication / Explicacion					
* neue Zylinderkopf-schrauben verwenden			use new cylinder head bolts		
★ Warmlauf (80°C)			warm up time (80°C)		
□ Schrauben einzeln lösen und wieder anziehen			loosen and tighten each bolt		
● Setzzeit			relaxation time		
➤ Drehwinkel			torque angle		
Motortyp / Engine type / Type de moteur / Tipo de motor					
⚙ 1,55 mm, Ø 82 mm, 5 Kerben/notches/encoches/muescas					
Mot.: XUD7, 161, 161A, A9A 1,7-1,8 ltr. Diesel, 43-44 kW (58-60 PS)					
Berlingo, BX, C15, Visa, Xsara, ZX 205, 306, 309, Partner					
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*058.981*		