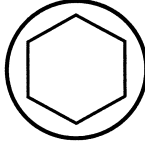
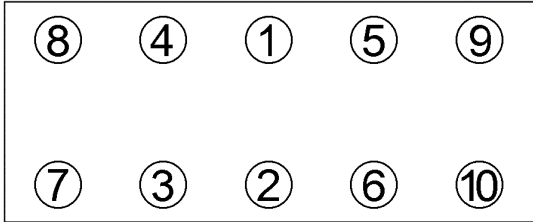


Anziehvorschrift für Zylinderkopf		107.270 passend für / suitable for adaptable à / adaptable a Mazda	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
 728.100 M 12x1,5x160			
Anziehen/ Tightening/ Serrage/ Apriete	* 15 Nm 29 Nm ➤ 90°-105° ➤ 90°-105° ➤ 90°-105°		
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ ☐ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor			
✚ 0,82 mm, Ø 87,5 mm			
Mot.: RF3F, RF4F, RF5C 2,0 ltr., 66-100 kW (90-136 PS)			
Premacy, 323 VI, Mazda 6, 626 V, MPV II			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*107.270*	