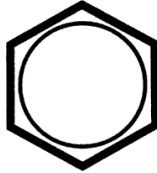
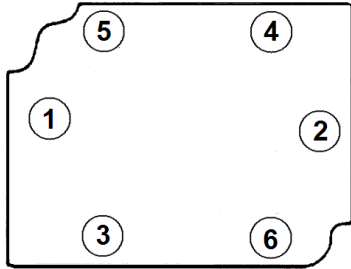


Anziehvorschrift für Zylinderkopf		123.372 passend für / suitable for adaptable à / adaptable a Liebherr	 Das Original		
Tightening Instructions for Cylinder Head					
Instructions de serrage pour culasse					
Prescripciones de apriete para culatas					
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete			
 308.560 M14x2x160					
Anziehen/ Tightening/ Serrage/ Apriete		D 914/916/924/926 30 Nm 90 Nm 70° 70° 70° 70°		G 924/926 60 Nm 140 Nm 90° 90° 90° 90°	
Zeichenerklärung / Explanations / Explication / Explicacion					
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos	
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)	
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo	
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera	
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro	
Motortyp / Engine type / Type de moteur / Tipo de motor ✚ 1,5 mm, Ø 138,5 mm Mot.: D 914 / D 924 D 916 / D 926 G 924 / G 926					
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*123.372*		