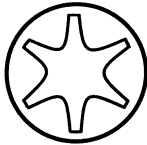
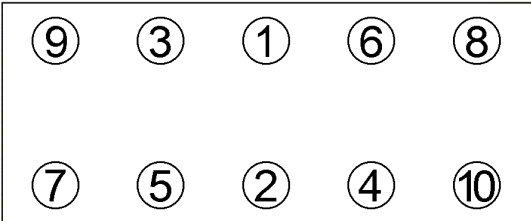


Anziehvorschrift für Zylinderkopf		125.042	
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		passend für / suitable for adaptable à / adaptable a	
		Ford	
		Das Original	
Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete			
			
087.830 M 10x1,5x143			
Anziehen/ Tightening/ Serrage/ Apriete	* ▶	15 Nm 30 Nm 90°	
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ ☐ ● ▶	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage
	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro		
Motortyp / Engine type / Type de moteur / Tipo de motor			
± 0,32 mm, Ø 80 mm			
Mot.: FYDA, FYDB, FYDC, FYDD, FYDH, FYJA, FYJB, FYJC 1,6 Ltr. 16V			
Fiesta, Focus, Fusion, Mazda 2/Demio			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*125.042*	