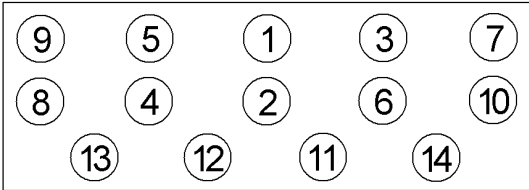


Anziehvorschrift für Zylinderkopf		144.340	 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a Fiat		
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
760.870 M 10 x 85/103				
Anziehen/ Tightening/ Serrage/ Apriete		* 20 Nm 40 Nm ➤ 90° ➤ 90°		
		M 8: 30 Nm		
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
✱ 1,74/1,65 mm, Ø 81,5 mm				
Mot.: 146 A2.000/146/246				
Uno Turbo i.e. (146)				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*144.340*	