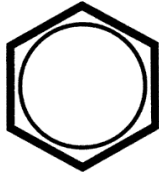


Anziehvorschrift für Zylinderkopf		144.470	
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		passend für / suitable for adaptable à / adaptable a Fiat Das Original	
 760.720 M 9 x 96		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete ⑧ ⑥ ② ⑤ ⑩ ⑦ ③ ① ④ ⑨	
Anziehen/ Tightening/ Serrage/ Apriete	156.A2.000 156.A2.048 176.B2.000 * 20 Nm ➤ 30 Nm ➤ 90° ➤ 90°	160.A3.000 187.A1.000 * 30 Nm ➤ 90° ➤ 90°	
Zeichenerklärung / Explanations / Explication / Explicacion			
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C) calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor			
⚙ 1,74/1,65 mm, Ø 71 mm			
Mot.: 156 A2.000/048, 156 A3.000, 156 C.046, 160 A3.000, 176 A6.000, 176 B2.000, 187 A1.000 1,0-1,1 Ltr.			
Fiat Cinquecento, Palio, Panda, Punto, Seicento, Tipo, Uno, Lancia Y10			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*144.470*	