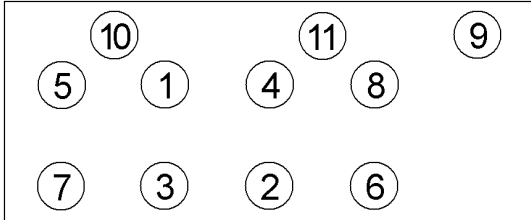


Anziehvorschrift für Zylinderkopf		144.570		 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a			
Instructions de serrage pour culasse		Fiat			
Prescripciones de apriete para culatas					
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete			
					
Anziehen/ Tightening/ Serrage/ Apriete	M 8 15 Nm 30 Nm	M 9 20 Nm 40 Nm	Mutter/nut/ écrou/tuerca 25 Nm 49 Nm		
Zeichenerklärung / Explanations / Explication / Explicacion					
	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos	
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)	
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo	
	Setzzeit	relaxation time	durée de tassement	tiempo de espera	
	Drehwinkel	torque angle	angle de serrage	ángulo de giro	
Motortyp / Engine type / Type de moteur / Tipo de motor					
✱ 1,27/1,20 mm, Ø 81 mm					
Mot.: 126 A2.000, 170 A.000/046 704 ccm, 2 Cyl.					
126 Cinquecento					
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*144.570*		