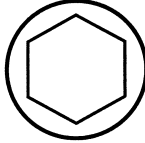
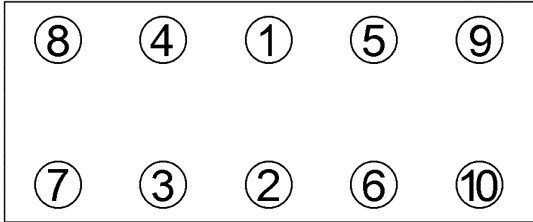


Anziehvorschrift für Zylinderkopf		152.720	 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for		
Instructions de serrage pour culasse		adaptable à / adaptable a		
Prescripciones de apriete para culatas		Mazda		
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
707.660 M 11 x 105				
Anziehen/ Tightening/ Serrage/ Apriete	* 20 Nm ➤ 90° ➤ 90°			
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 84 mm; $\frac{1}{8}$: 0,95 mm				
Mot: FS, FS2C, FS7E, FS7G, FS-DS 2,0 ltr				
323 F VI, 323 S VI, 626 V, MPV II, Premacy				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*152.720*		