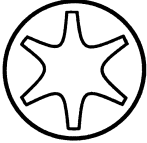
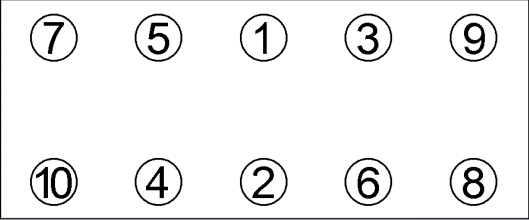


Anziehvorschrift für Zylinderkopf		164.271		
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		passend für / suitable for adaptable à / adaptable a		
		Ford		
		Das Original		
		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
802.880 M 12 x 136				
Anziehen/ Tightening/ Serrage/ Apriete	* 10 Nm ● 100 Nm ● 3 min □ 180° 70 Nm ➤ 120°			
Zeichenerklärung / Explanations / Explication / Explicacion				
*	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 83,3 mm 𐀀: 1,52 mm				
Mot: RFN; RVA; RTK; RTJ; RFA; RTE; RFD RFK; RFB; RFM; RTD; RTF; RTG; RTH RFL; RTC; RFS				
Ford: Fiesta; Escort; Mondeo Mazda: 121				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*164.271*		