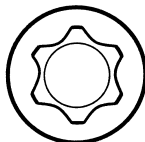


Anziehvorschrift für Zylinderkopf		165.980		
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		passend für / suitable for adaptable à / adaptable a	PSA	Das Original
Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete				
	84159 732610			
453.490 M11x127x1,5				
Anziehen/ Tightening/ Serrage/ Apriete	* □ ➤	15 Nm 50 Nm 20 Nm 285°		
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø 86 mm, ± 0,70 mm, 2 Löcher/holes				
Mot.: RFJ, EW10A 2,0 Ltr. 16V				
307, 407, 807, C8, C5, C4 ab 2005➔				
C4 Picasso ab 2006➔				
308, Expert, Jumpy ab 2007➔				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*165.980*	