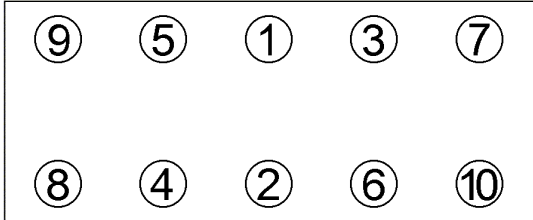


Anziehvorschrift für Zylinderkopf		167.411	 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for		
Instructions de serrage pour culasse		adaptable à / adaptable a		
Prescripciones de apriete para culatas		Rover		
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
049.630 M 9 x 412				
Anziehen/ Tightening/ Serrage/ Apriete	* 20 Nm ➤ 180° ➤ 180°			
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 82,5 mm; $\frac{1}{4}$: 1,3 mm				
Mot. 1,1/1,4 ltr (8V) 1,4/1,6/1,8 ltr (16V) 11K2A/11K2D/14K2A/14K2D/14K2F 14K4F/16K4F/18K4K				
Rover 25/45/75/100/200/400				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*167.411*	