

Anziehvorschrift für Zylinderkopf		177.080	 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for		
Instructions de serrage pour culasse		adaptable à / adaptable a		
Prescripciones de apriete para culatas		Honda		
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
⑨ ⑤ ① ③ ⑦ ⑧ ④ ② ⑥ ⑩				
Anziehen/ Tightening/ Serrage/ Apriete		* 30 Nm 85 Nm		
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 81,5mm;  : 0,6mm				
Mot: B16A, B16A1, B16A2, B18C4				
1,6 ltr.-1,8 ltr. 110-140 kW (150-190 PS)				
Civic III-V, CRX II-III, Integra				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*177.080*		