

Anziehvorschrift für Zylinderkopf		186.421											
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a Fiat											
Instructions de serrage pour culasse													
Prescripciones de apriete para culatas													
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete											
		<table border="1"><tr><td>10</td><td>6</td><td>2</td><td>4</td><td>8</td></tr><tr><td>7</td><td>3</td><td>1</td><td>5</td><td>9</td></tr></table>		10	6	2	4	8	7	3	1	5	9
10	6	2	4	8									
7	3	1	5	9									
152.440 M 12x1,25x218													
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤ ➤	20 Nm 65 Nm 90° 90° 90°											
Zeichenerklärung / Explanations / Explication / Explicacion													
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos									
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)									
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo									
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera									
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro									
Motortyp / Engine type / Type de moteur / Tipo de motor													
Ø: 83 mm; $\frac{1}{2}$: 1,80 mm													
Mot. 182.A7.000, 182.A8.000 1,9 ltr TD 55-74 kW (75-100 PS)													
Brava, Bravo, Marea 3/1996➔													
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*186.421*										