

Anziehvorschrift für Zylinderkopf		226.220 passend für / suitable for adaptable à / adaptable a Mazda	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
028.230 M10x1,25x145,5				
Anziehen/ Tightening/ Serrage/ Apriete	* 5 Nm 15 Nm 45 Nm ➤ 90° ➤ 90°			
Zeichenerklärung / Explanations / Explication / Explicacion				
* ★ □ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 89 mm; $\frac{1}{8}$: 0,4 mm				
Mot.: LF17; LF18; LFF7; LF5W, LF5H, LF-62, LF-DE 2,0 ltr 104-125 kW (141-170PS)				
Mazda 3; Mazda 5, Mazda 6, MX-5 III				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*226.220*	