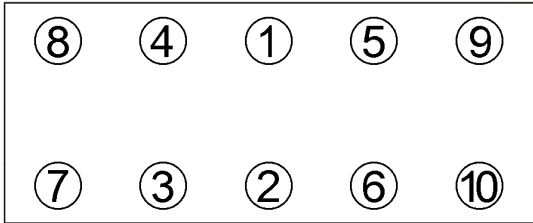


Anziehvorschrift für Zylinderkopf		255.070		
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a Ford		
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
028.230 M 10x1,25x145,5				
Anziehen/ Tightening/ Serrage/ Apriete	* 5 Nm 15 Nm 45 Nm ➤ 90° ➤ 90°			
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 89 mm; $\frac{1}{8}$: 0,50 mm				
Mot: AODA; AODB; CJBB; N4JB; GZ; L3C1; LF17; LF18 LFF7 2,0; 2,3 ltr. Duratec; DOHC 16V				
Fiesta; FocusII; MondeoIII/IV; Maverick; C-Max Mazda 3; 5; 6				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*255.070*	