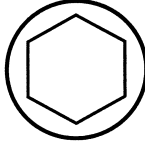
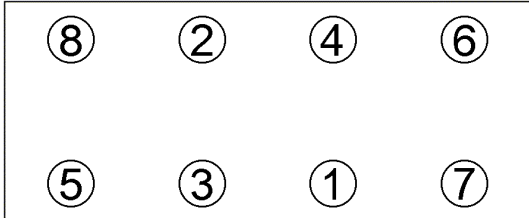


Anziehvorschrift für Zylinderkopf		268.240	 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a		
Instructions de serrage pour culasse		Nissan		
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
267.660 M11x1,25x123				
Anziehen/ Tightening/ Serrage/ Apriete	* ☐ ➤	49 Nm 98 Nm 34 - 44 Nm 90° - 95° 90° - 95°		
Zeichenerklärung / Explanations / Explication / Explicacion				
	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
rechts / right				
Mot./eng. VQ30DE Maxima QX (A32)				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*268.240*	