

Anziehvorschrift für Zylinderkopf		279.422		
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		passend für / suitable for adaptable à / adaptable a GM Das Original		
		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete 10 2 8 4 6 ← Engine front 1 9 3 7 5		
906.110 M 14x1,5x155				
Anziehen/ Tightening/ Serrage/ Apriete	Without captured washers 30 Nm ➤ 85° ➤ 85° ➤ 85°	With captured washers 30 Nm ➤ 110° ➤ 110° ➤ 110°		
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 95,3 mm; $\frac{1}{4}$: 1,30 mm				
Mot: LWN 2,8 ltr.				
Colorado, Express/Savana				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*279.422*	