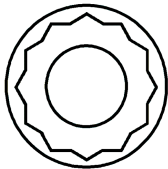
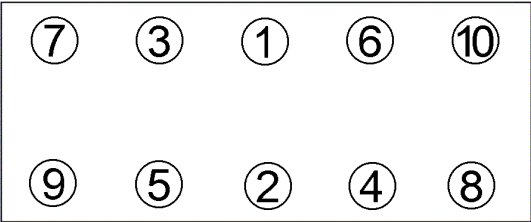


Anziehvorschrift für Zylinderkopf Tightening Instructions for Cylinder Head Instructions de serrage pour culasse Prescripciones de apriete para culatas		286.760 passend für / suitable for adaptable à / adaptable a Toyota	 Das Original
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
 523.420 M12x180x1,25			
Anziehen/ Tightening/ Serrage/ Apriete	* 50 Nm ➤ 90° ➤ 90° ➤ 90° ☐ 90° lösen / loosen ☐ 90° lösen / loosen ➤ 90° ➤ 90° ➤ 90°		
Zeichenerklärung / Explanations / Explication / Explicacion			
* neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★ Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐ Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
● Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤ Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor Ø: 87 mm / 1,10 mm 2,0 / 2,2 Ltr. Mot.: 1AD-FTV, 2AD-FHV, 2AD-FTV 91-130 KW (124-177 PS) Auris, Avensis, Corolla, RAV 4			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*286.760*	