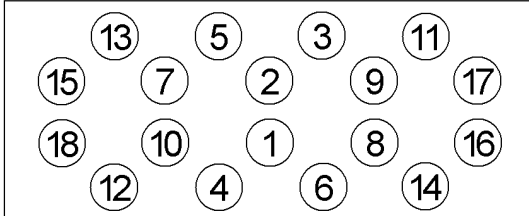


Anziehvorschrift für Zylinderkopf		330.770 passend für / suitable for adaptable à / adaptable a Nissan	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
			
Anziehen/ Tightening/ Serrage/ Apriete	* 25 Nm 50 Nm 100 Nm ☐ 180° + 45 Nm ➤ 95° ➤ 95°		
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ ☐ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor			
Ø: 97 mm; $\varnothing$: 0,65 mm; 3 Löcher/holes			
Mot: ZD30DDTi 3,0 ltr.TD 96-125 kW (131-170PS)			
Patrol 05/00➔ Cabstar 10/06➔			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*330.770*	