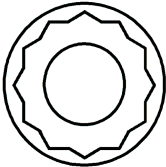
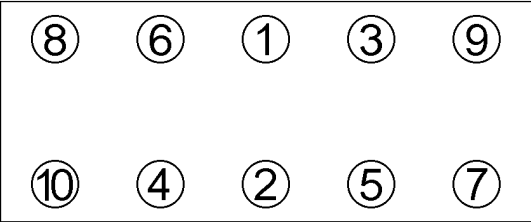


Anziehvorschrift für Zylinderkopf		333.460		Das Original
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
004.260 M9x1,25x101				
Anziehen/ Tightening/ Serrage/ Apriete	☒ * ☐ ☒ ☒	25 Nm 49 Nm 20 Nm 90° 90°		
Zeichenerklärung / Explanations / Explication / Explicacion				
☒	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
☒	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
☒	Setzzeit	relaxation time	durée de tassement	tiempo de espera
☒	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Mot. 1,6 SOHC 16V 1584 ccm 98 PS Space Star DG0 2001-				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*333.460*		