


Anziehvorschrift für Zylinderkopf		362.832	
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a Ford	
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	

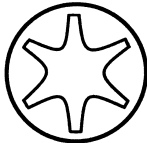

087.830
M 10x1,5x143

9	3	1	6	8
7	5	2	4	10

Anziehen/ Tightening/ Serrage/ Apriete	* ➤	5 Nm 15 Nm 35 Nm 75°
---	----------------	-------------------------------

Zeichenerklärung / Explanations / Explication / Explicacion

✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Ø 79,8 mm; $\frac{1}{8}$: 0,32 mm

Mot: HXJA;RHBA;PNBA
1,6 ltr. Duratec TI-VCT
110;115;120;123 PS

Fiesta CB1 → 07/2008; Focus C-Max CB3 → 03/2007
Focus CB4 → 12/2007; Mondeo CA2 → 02.2007

ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601	*362.832*
--	------------------