

Anziehvorschrift für Zylinderkopf

Tightening Instructions for Cylinder Head

Instructions de serrage pour culasse

Prescripciones de apriete para culatas

377.290


passend für / suitable for
adaptable à / adaptable a




Das Original

Schraubenkopf / Head shape
Tête de vis / Cabeza de tornillo

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

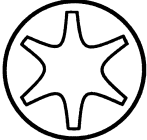

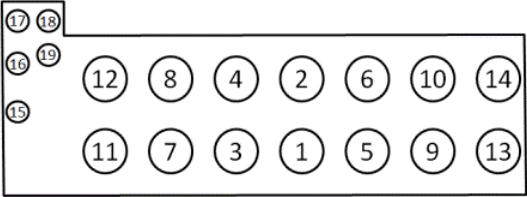

794.480
M 11x1,5x188

Anziehen/
Tightening/
Serrage/
Apriete

*

➤

➤

Pos. 1-14 (M11)
50 Nm
180°
180°

Pos. 15-19 (M8)
19 Nm

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

±1,00 mm

Mot.: B58 B30 A 240-265 KW
3,0 ltr

BMW: 3´F30/F31 340i
4´F32/F33/F36 440i
7´G11/G12 740i

ElringKlinger AG, Max-Eyth-Str.2
72581 Dettingen / Erms. Tel. 07123/724 601

377.290