


Anziehvorschrift für Zylinderkopf		378.041 passend für / suitable for adaptable à / adaptable a Fiat Power Train - FPT	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			

Schraubenkopf / Head shape
 Tête de vis / Cabeza de tornillo

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

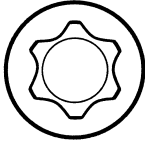

7	4	2	6	10
8	3	1	5	9

Anziehen/ Tightening/ Serrage/ Apriete	* * ➤ ➤ ➤ ➤	M15: 130 Nm M12: 65 Nm M15: 90° M12: 90° M15: 80° M12: 60°
---	----------------------------	---

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Ø: 100,3 mm; $\frac{1}{2}$: 0,80 mm

Mot.: F5C - 3,2 ltr.

FPT - Fiat Power Train
 New Holland T5/T4-Series
 Case IH /Farmall-Series
 John Deere 5G/5GH-Series

ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601	*378.041*
--	---------------------------------------