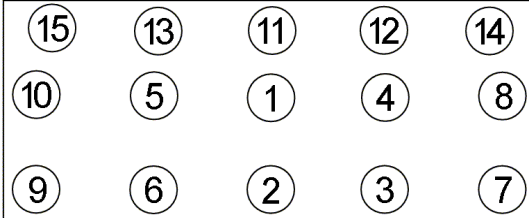


Anziehvorschrift für Zylinderkopf		380.901		
Tightening Instructions for Cylinder Head		passend für / suitable for		
Instructions de serrage pour culasse		adaptable à / adaptable a		
Prescripciones de apriete para culatas		Chrysler / Dodge / Jeep		
Schraubenkopf / Head shape		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
Tête de vis / Cabeza de tornillo				
				
Anziehen/ Tightening/ Serrage/ Apriete		* 1-10 ➤ 34 Nm (25 ft. lbs.) 11-15 ➤ 20 Nm (15 ft. lbs.) 1-10 ➤ 54 Nm (40 ft. lbs.) 11-15 ➤ 20 Nm (check) 1-10 ➤ 61 Nm (45 ft. lbs.) 1-10 ➤ 90° 11-15 ➤ 34 Nm (25 ft. lbs.)		
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
6.4L V8 16V SRT Apache				
Mot.: ESG, ESH				
mounting position: right				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*380.901*	