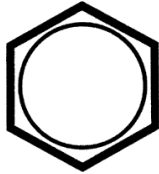
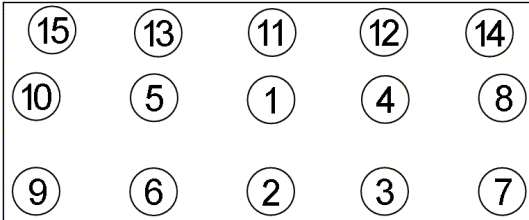


Anziehvorschrift für Zylinderkopf		380.911		 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a			
Instructions de serrage pour culasse		Chrysler / Dodge / Jeep			
Prescripciones de apriete para culatas					
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete			
					
Anziehen/ * Tightening/ Serrage/ Apriete		1-10 11-15 1-10 11-15 1-10 1-10 11-15	34 Nm (25 ft. lbs.) 20 Nm (15 ft. lbs.) 54 Nm (40 ft. lbs.) 20 Nm (check) 61 Nm (45 ft. lbs.) 90° 34 Nm (25 ft. lbs.)		
Zeichenerklärung / Explanations / Explication / Explicacion					
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos	
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)	
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo	
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera	
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro	
Motortyp / Engine type / Type de moteur / Tipo de motor					
6.4L V8 16V SRT Apache					
Mot.: ESG, ESH					
mounting position: left					
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*380.911*		