



Anziehvorschrift für Zylinderkopf		384.420 passend für / suitable for adaptable à / adaptable a PSA	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			

Schraubenkopf / Head shape
 Tête de vis / Cabeza de tornillo

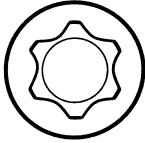

431.440
M 10x1,5x117

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

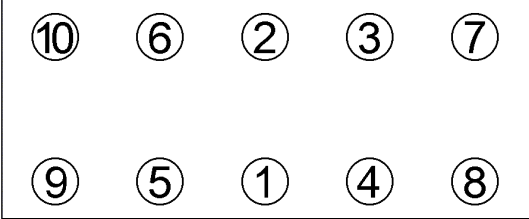

Anziehen/	✱	20 Nm
Tightening/	➤	130°
Serrage/	➤	130°
Apriete		

Zeichenerklärung / Explanations / Explication / Explicacion

✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

 Ø: 79,9 mm; $\frac{1}{4}$: 0,62 mm

 Mot: TU5JP4/B/S,NFR,NFS,NFU
 1,6 ltr. 16V; 80 KW (109 PS)

 Berlingo,C2,C3,C4,Xsara
 1007,206,207,307,Partner

ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601	*384.420*
--	------------------