

Anziehvorschrift für Zylinderkopf		423.580			
Tightening Instructions for Cylinder Head					
Instructions de serrage pour culasse					
Prescripciones de apriete para culatas					
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		passend für / suitable for adaptable à / adaptable a		Nissan	Das Original
Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete					
11 13 14 12 9 7 3 5 1 2 6 4 8 10 15					
Anziehen/ Tightening/ Serrage/ Apriete		* 29 Nm 64 Nm 29 Nm 59 - 69 Nm		* POS. 11 - 15 6,8 - 8 Nm	
Zeichenerklärung / Explanations / Explication / Explicacion					
*	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos	
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)	
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo	
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera	
►	Drehwinkel	torque angle	angle de serrage	ángulo de giro	
Motortyp / Engine type / Type de moteur / Tipo de motor					
77,5 mm Ø					
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*423.580*		