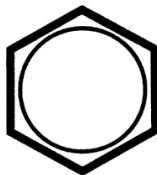
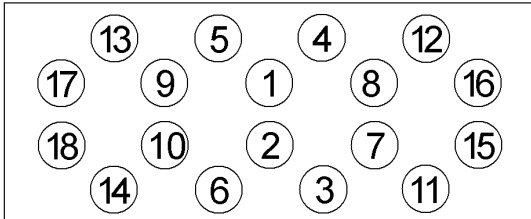


Anziehvorschrift für Zylinderkopf		432.830	
Tightening Instructions for Cylinder Head		passend für / suitable for	
Instructions de serrage pour culasse		adaptable à / adaptable a	
Prescripciones de apriete para culatas		Rover	
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
			
114.270 M 10 / M 12			
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤ ➤	40 Nm 60° 60° 20° (M12x140)	
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ ☐ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage
	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro		
Motortyp / Engine type / Type de moteur / Tipo de motor			
1,6 mm ÷ 2,5 Ltr. Turbo Diesel			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*432.830*	