

Anziehvorschrift für Zylinderkopf		436.651		
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		passend für / suitable for adaptable à / adaptable a		
Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		PSA Das Original		
A  B  758.280 M 11x1,5x175		8 4 1 5 9 7 3 2 6 10		
Anziehen/ Tightening/ Serrage/ Apriete * ☐ ★ ● ☐ A: 60 Nm 20 Nm + 120° 15 min 120 min 20 Nm + 120° B: 60 Nm 20 Nm + 300°				
Zeichenerklärung / Explanations / Explication / Explicacion				
*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 84,5 mm; ⌀: 1,48 mm				
Mot: XU5M/J/JA/S/CP/JP, XU5 1C/2C XU7JB/JP, XU9S/J/JA/J4, XU9 2C 1,6-1,9 ltr. 53-116 kW (72-157 PS)				
BX, ZX, Xantia, Xsara, ab 07/1987➔				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*436.651*		