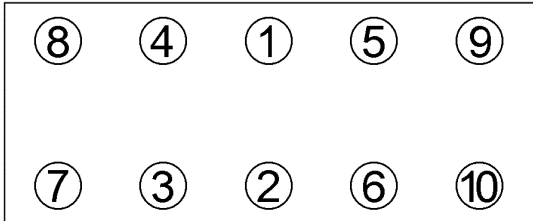


Anziehvorschrift für Zylinderkopf		442.832	 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a PSA		
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
 267.550 M 12x1,5x126				
Anziehen/ Tightening/ Serrage/ Apriete		* 20 Nm 60 Nm ➤ 110° ➤ 110°		
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 85,8 mm; ⚙: 1,40 mm				
Mot: DW10CTED4				
2,0 ltr. 16V				
120 kW (163 PS)				
407, 508, 5008, 308 ab 06/2009➔				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*442.832*	