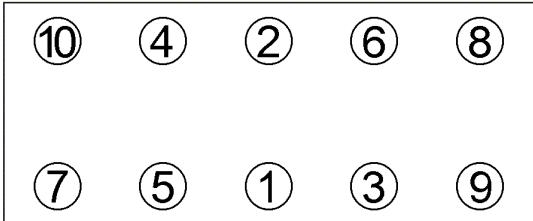


Anziehvorschrift für Zylinderkopf		452.070	 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a Honda		
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
 728.110 M 9x1,25x155				
Anziehen/ Tightening/ Serrage/ Apriete	* 15 Nm 29 Nm ➤ 130°			
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
1243cc L12A1 78 PS/HP				
1339cc L13A1 83 PS/HP				
Jazz GD 1,2/1.4ltr. 3/2002-				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*452.070*	