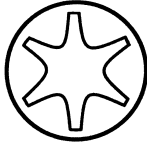
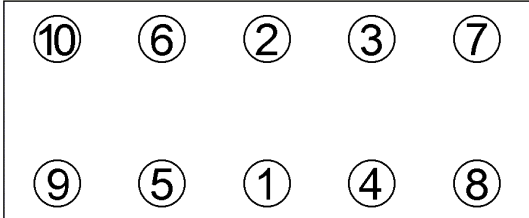


Anziehvorschrift für Zylinderkopf			467.593		 Das Original
Tightening Instructions for Cylinder Head			passend für / suitable for		
Instructions de serrage pour culasse			adaptable à / adaptable a		
Prescripciones de apriete para culatas			Opel		
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo			Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
 803.010 M 11 x 105					
Anziehen/ Tightening/ Serrage/ Apriete			* 25 Nm ➤ 90° ➤ 90° ➤ 90° ➤ 15°		
Zeichenerklärung / Explanations / Explication / Explicacion					
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos	
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)	
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo	
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera	
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro	
Motortyp / Engine type / Type de moteur / Tipo de motor					
Ø: 87,5 mm; $\frac{1}{2}$: 1,3 mm					
Mot. X20XER, X20XEV, X20SED, Z22XE, T20SED X22SE, X22XE, Y22SE, Y22XE, C20SEL,					
Astra F, Astra G, Calibra, Frontera, Omega B Sintra, Vectra A, Vectra B Evanda, Leganza, Nubira, Rezzo, Epika					
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*467.593*		