

Anziehvorschrift für Zylinderkopf		470.722	 Das Original																
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a Opel																	
Instructions de serrage pour culasse																			
Prescripciones de apriete para culatas																			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete																	
 803.000 M 11x1,25x105		<table border="1"><tr><td>⑧</td><td>④</td><td>①</td><td>⑤</td></tr><tr><td>⑦</td><td>③</td><td>②</td><td>⑥</td></tr><tr><td>⑦</td><td>③</td><td>②</td><td>⑥</td></tr><tr><td>⑧</td><td>④</td><td>①</td><td>⑤</td></tr></table>		⑧	④	①	⑤	⑦	③	②	⑥	⑦	③	②	⑥	⑧	④	①	⑤
⑧	④	①	⑤																
⑦	③	②	⑥																
⑦	③	②	⑥																
⑧	④	①	⑤																
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤ ➤ ➤	25 Nm 90° 90° 90° 15°																	
Zeichenerklärung / Explanations / Explication / Explicacion																			
✱	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos															
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)															
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo															
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera															
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro															
Motortyp / Engine type / Type de moteur / Tipo de motor																			
Mot. Y 26 SE																			
Omega - B 1994 →																			
Vectra - B 1996 →																			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*470.722*																