

Anziehvorschrift für Zylinderkopf		475.612	 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a		
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas		Subaru		
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
③ ① ⑥ ⑤ ② ④				
Anziehen/ Tightening/ Serrage/ Apriete	* ☐ ➤ ➤	60 Nm 20 Nm 60 Nm 90° 90°		
Zeichenerklärung / Explanations / Explication / Explicacion				
✳	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 86,5 mm; $\frac{1}{16}$: 1,05 mm				
MC: 20Z 2,0 ltr. TD Boxer				
Outback, Impreza, Liberty IV, Legacy IV				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*475.612*	