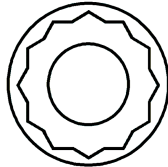
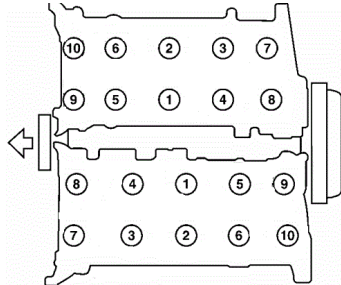


Anziehvorschrift für Zylinderkopf		484.030	 Das Original
Tightening Instructions for Cylinder Head		passend für / suitable for	
Instructions de serrage pour culasse		adaptable à / adaptable a	
Prescripciones de apriete para culatas		Lexus / Toyota	
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
			
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤ ➤	80 Nm 90° 90° 90°	
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ □ ● ➤	neue Zylinderkopf-schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage
emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro			
Motortyp / Engine type / Type de moteur / Tipo de motor			
4.5 L V8 32V D4-D - Diesel			
Mot.: 1VD-FTV			
Ø: 87,5 mm / 1/8: 1,30 mm			
assembly position: right			
Lexus LX450D/460/570 Land Cruiser			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*484.030*	