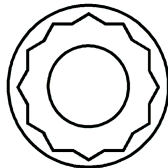
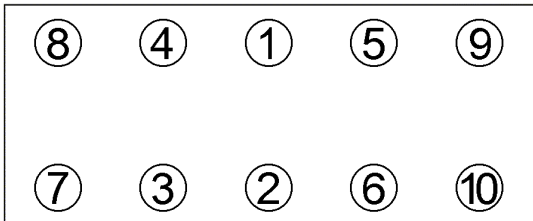


Anziehvorschrift für Zylinderkopf		484.790		
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
707.630 M 11 x 107				
Anziehen/ Tightening/ Serrage/ Apriete	* 20 - 30 Nm 40 - 60 Nm 76 - 81 Nm			
Zeichenerklärung / Explanations / Explication / Explicacion				
*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
⚙ 1,10 mm Ø 79,5 mm				
Motor/engine B5 1,5 16V 1498 ccm SOHC 16V 55kW / 75PS (hp) Demio (DW) 4/2000 ➔				
1 Stück/piece/pièce/pieza				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*484.790*	