

Anziehvorschrift für Zylinderkopf		529.710 passend für / suitable for adaptable à / adaptable a Subaru	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
⑤ ① ③ ⑦ ⑧ ④ ② ⑥				
Anziehen/ Tightening/ Serrage/ Apriete		* 39 Nm 73 Nm □ 90° 75 Nm		
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Justy I (KAD)1000 05.87-10.95 37 KW				
Justy I (KAD-A)1000 4WD 05.87-11.94 37 KW				
Justy I (KAD)1000 11.84-06.89 40 KW				
Justy I (KAD-A)1000 4WD 11.84-12.90 40 KW				
Libero Bus (E10, E12) 1,0 4WD 01.83-12.87 37 KW				
MC EF10				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*529.710*	