

Anziehvorschrift für Zylinderkopf		540.410 passend für / suitable for adaptable à / adaptable a Isuzu	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
Anziehen/ Tightening/ Serrage/ Apriete				
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Isuzu Midi Bus 2,0 ltr. 01.89- 61KW MC 4ZC1				
Isuzu Midi Bus 2,0 ltr. 4WD 01.89- 61KW MC 4ZC1				
Isuzu Midi Kasten 2,0 ltr. 06.88- 61KW MC 4ZC1				
Isuzu Midi Kasten 2,0 ltr. 4WD 09.88- 61KW MC 4ZC				
Isuzu Midi Van 2,0 ltr. 01.89- 61KW MC 4ZC1				
Isuzu Midi Van 2,0 ltr. 4WD 01.89- 61KW MC 4ZC1				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*540.410*		