

Anziehvorschrift für Zylinderkopf		540.480 passend für / suitable for adaptable à / adaptable a Nissan	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
⑨ ③ ① ⑥ ⑧ ⑦ ⑤ ② ④ ⑩				
Anziehen/ Tightening/ Serrage/ Apriete	* ☐ ➤	29 Nm 78 Nm -360° 29 Nm 80°-85°		
Zeichenerklärung / Explanations / Explication / Explicacion				
✳	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
MC KA24E				
Nissan Pick up 2,4i 12V 04.92-02.98 91KW				
Nissan Pick up 2,4i 02.98- 88KW				
Nissan Prairie 2,4i 04.92-07.94 98KW				
Nissan Terrano II 2,4 ltr. 05.96-01.02 85KW				
Nissan Terrano II 2,4i 12V 02.93-06.96 91KW				
Ford Maverick 2,4i 02.93-08.96 91KW				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*540.480*	