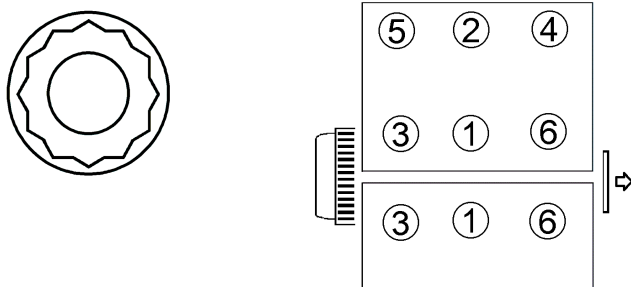


Anziehvorschrift für Zylinderkopf		692.790		
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a Subaru		
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤ ➤ ➤ ➤ ➤	1-6: 29 Nm 1-6: 69 Nm 1-6: loosen 180° 1-6: loosen 180° 1-2: 34 Nm 3-6: 15 Nm 1-6: 90° 1-6: 90°		
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 93,8 mm / 1/8": 0,50 mm				
Mot: EJ203 (EJ20-Series) 2,0 ltr.				
Forester, Legacy, Liberty, Impreza, Outback				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*692.790*	