

Anziehvorschrift für Zylinderkopf		704.600 passend für / suitable for adaptable à / adaptable a Iveco	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
⑦③①⑤⑨ ⑧④②⑥⑩				
Anziehen/ Tightening/ Serrage/ Apriete	* 80 Nm 160 Nm 230 Nm ★ 80°C ☐ 230 Nm nach 1000 km: ☐ 230 Nm			
Zeichenerklärung / Explanations / Explication / Explicacion				
★	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
OM 50, OM 55, 65 NC, OM 65, 70 NC, OM 70, 75 NC, OM 75, OM 80, OM 90, OM 100/10 Cerbiatto, Daino, Leoncino 35, Lupetto A/15 Tigrotto 50/55/65, Tigrotto M5K 4x4				
Mot. CO 3				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*704.600*	