

Anziehvorschrift für Zylinderkopf		708.911		 Das Original
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a		
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas		Mitsubishi		
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo				
A  B 		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete 7 5 2 4 10 9 3 1 6 8		
709.170 M 10 x 100				
Anziehen/ Tightening/ Serrage/ Apriete	A 33 Nm 53 Nm 73 Nm	B * 49 Nm □ 20 Nm ➤ 90° ➤ 90°		
Zeichenerklärung / Explanations / Explication / Explicacion				
	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 76,0 mm				
Mot: 4G13 (12V), 4G13 (BJ92-..., 12V), 4G15, 4G15 (12V)				
1,3 ltr.-1,5 ltr. 55-66 kW (75-90 PS)				
Colt III-IV, Lancer III-V				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*708.911*	